

BUMOT LUGGAGE SYSTEMS

INSTALLATION INSTRUCTIONS

BMW 1150GS/GSA

Thank you for purchasing Bumot Luggage Systems for your motorcycle. This luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. Bumot Luggage has built in several features, including hinged lids and strap attachment points, to name a couple. Powder coating, inside & out, provides a durable finish for your luggage system. We're confident you will enjoy your new luggage system for years to come.

General Instructions:


Please read through these instructions completely before starting installation. Do not tighten any bolt until the entire assembly is completed. Leave all bolts completely loose until every component is in place. Once everything has been installed, tighten all bolts snugly. After the complete system has been snugly bolted down, and any adjustments made, remove one bolt at a time. Using blue Loc-Tite © reinstall and fully tighten each bolt. **NOTE:** Do not apply Loc-Tite © to any bolt which has is a self-locking nut.

The hardware for most parts is wrapped in place where it belongs. **DO NOT** remove the wrap until ready to install that particular piece. This helps keep track of what bolts go with what part.


1. If equipped, remove the original BMW luggage rack.




2. Remove R/L turn signals and reinstall using relocation brackets, as shown in photo below. Step 2 may be omitted if bike is equipped with smaller type turn signals.

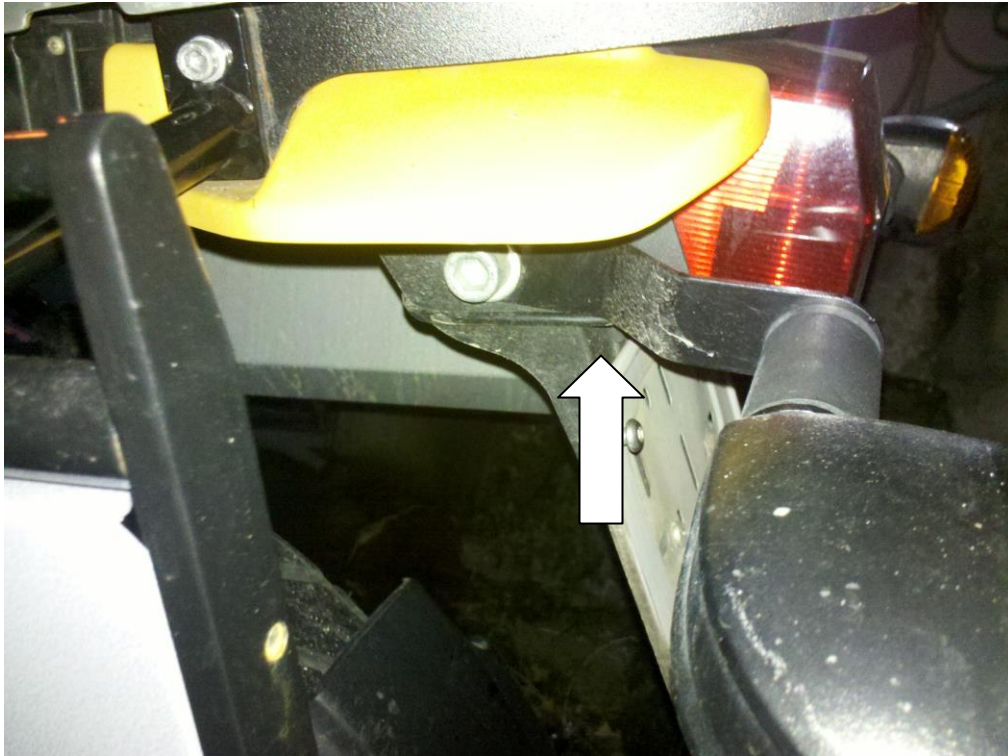


3. Attach the left pannier mount with supplied M6X20 & M8X20 bolts at points shown in photos below. Be sure to leave all bolts loose at this point.

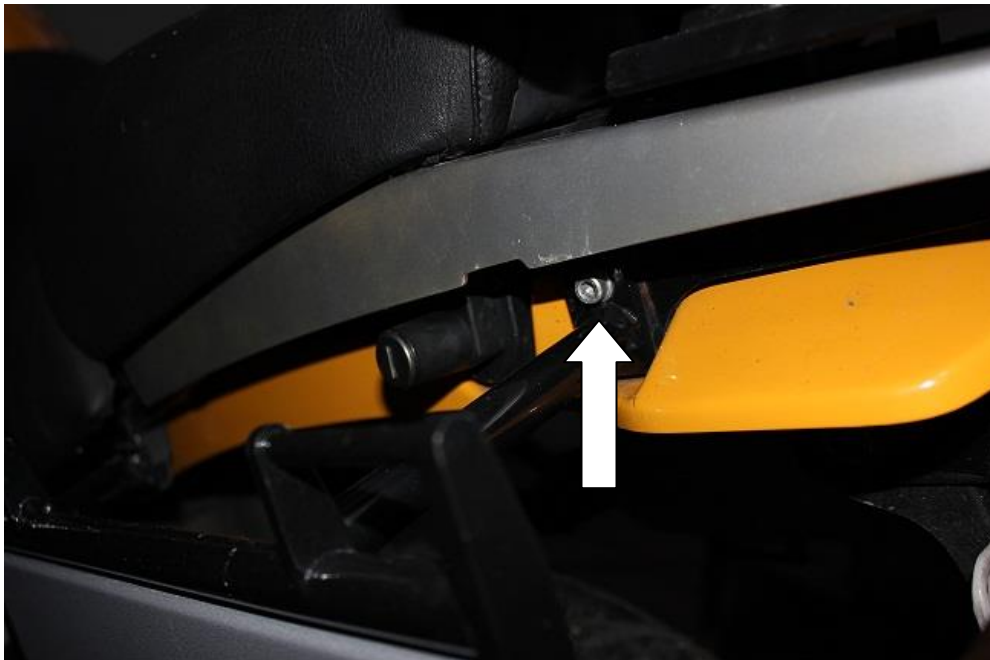


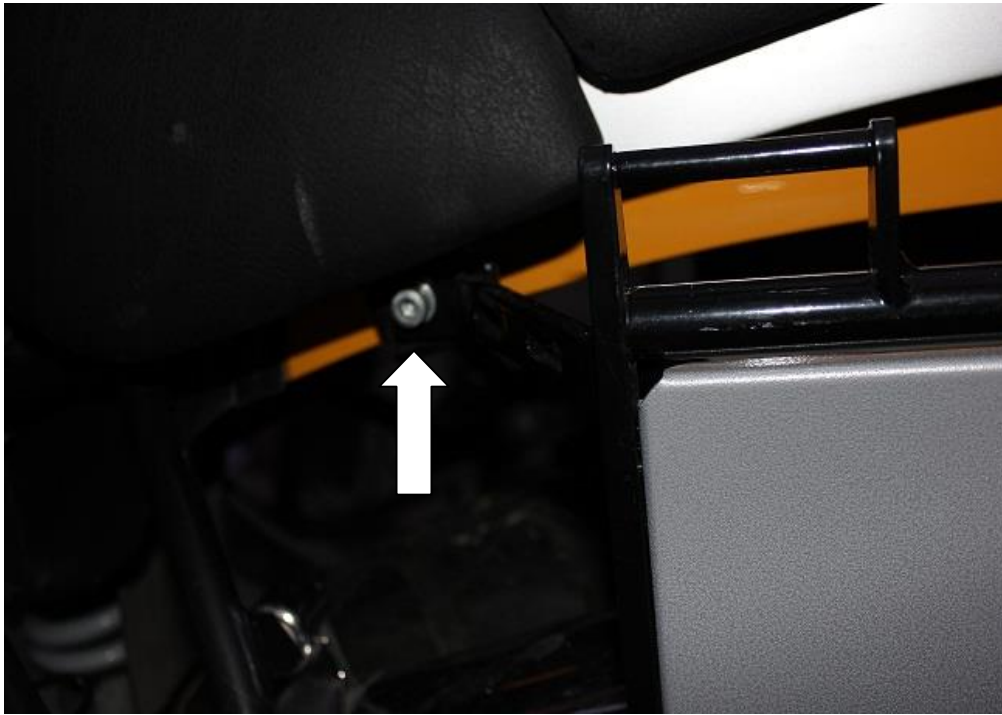

4. Remove the left passenger footpeg and attach the lower left mount bracket together with the footpeg using supplied M8X30 bolt, as shown below. The lower mount bracket should be installed between the footpeg & frame.

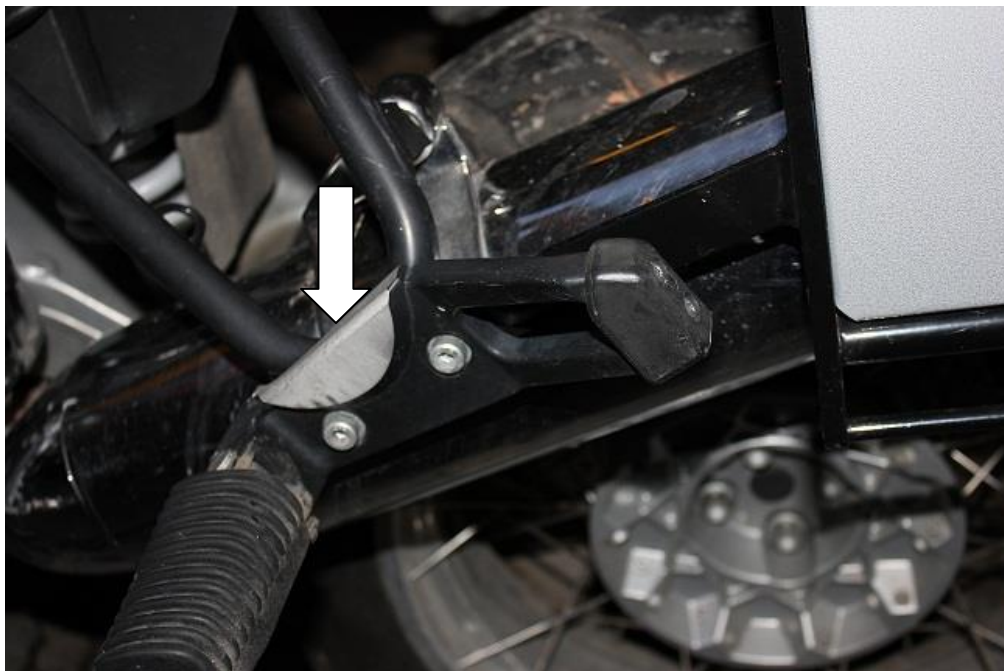

5. Install the right side pannier mount at the same 2 upper mount points as the left side. Attach the right lower mount bracket to the passenger footpeg as shown below. There is no need to remove the footpeg.

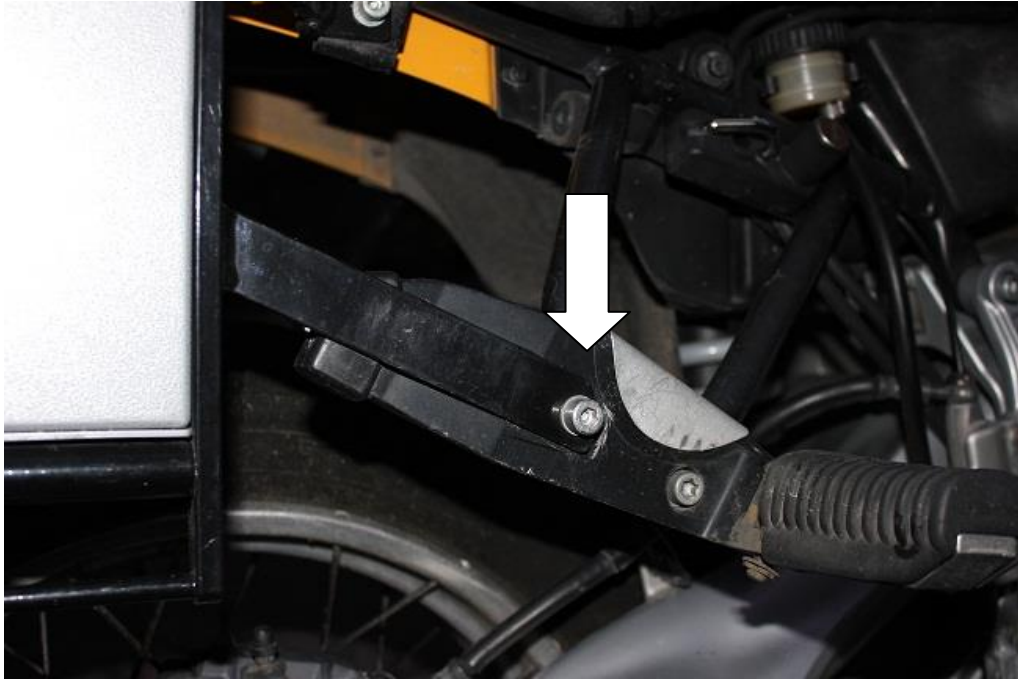

6. Install rear connecting bar with supplied M6X20 bolts, as shown below. Tighten all bolts according to general instructions.



Enjoy!.

www.bumot.eu